



Compatibility List for CNet 3.5G Mobile Router, CWR-635M

CWR-635M 3.5G USB Dongle Support List

Update: 2009/6/17 by CNet FAE

Brand	Model	Interface
Amoi	H01	USB
ASUS	T500	ExpressCard
BandLuxe	C100	ExpressCard
BandLuxe	C100S	ExpressCard
BandLuxe	C120	USB
BandLuxe	C170	USB
BandLuxe	C270	USB
Emobile	D01HW	USB
Emobile	D02HW	USB
Emobile	D11LC	USB
Emobile	D12HW	USB
Emobile	D12LC	USB
Emobile	D21HW	USB
Emobile	D21LC	USB
GeoPacket	UM20	USB
Huawei	E156G	USB
Huawei	E160	USB
Huawei	E160	USB
Huawei	E160	USB
Huawei	E169	USB
Huawei	E169G	USB
Huawei	E170	USB
Huawei	E170	USB
Huawei	E172	USB
Huawei	E180	USB
Huawei	E219	USB
Huawei	E220	USB
Huawei	E220	USB
Huawei	E226	USB
Huawei	E226	USB

Huawei	E270	USB
Huawei	E800	ExpressCard
KPT	WM61	USB
KPT	WM61	USB
KPT	WM66	USB
KPT	WM66	USB
Novatel	MC990D	USB
NU	Q101	USB
Option	iCON 225	USB
Option	iCON 225	USB
OPTION (AT&T)	GE0202	ExpressCard
Popular	C7-P102HU	USB
Prolink	PHS100	USB
Sierra Wireless	885	USB
Sierra Wireless	880U	USB
Softbank	C01LC	USB
Sony Ericsson	MD300	USB
Sony Ericsson	PC300	CardBus(PCMCIA)
Suncomm	Nonebrand	USB
ZTE	K3520-Z	USB
ZTE	K3715	USB
ZTE	MF628	USB
ZTE	MF636	USB
ZTE	MF626	USB
ZTE	MF626	USB
ZTE	MF636	USB
ZTE	MF636	USB

USB WebCAM Support List

PID	Product name
08A0	Logitech QuickCam IM
08A2	Logitech Webcam Plus
08A9	Logitech QuickCam for Notebooks Deluxe
08AA	Logitech Notebook Pro
08AD	Logitech QuickCam Communicate STX
08AE	Logitech QuickCam for Notebooks
08AF	Logitech QuickCam Easy Logitech QuickCam Cool Logitech QuickCam Connect (China)
08D7	Logitech QuickCam Communicate STX
08D9	Logitech QuickCam IM Logitech QuickCam Connect
08DA	Logitech QuickCam Messenger
08DD	Logitech QuickCam for Notebooks
0920	Logitech QuickCam Express
0921	Logitech WebCam
0928	Logitech QuickCam Express
0929	Logitech WebCam
092A	Logitech QuickCam for Notebooks
092B	Logitech WebCam Plus
092C	Logitech QuickCam Chat
092E	Logitech QuickCam Chat
092F	Logitech QuickCam Express
08B0	Logitech QuickCam Pro Logitech QuickCam Pro 3000
08B1	Logitech QuickCam Pro for Notebooks
08B2	Logitech QuickCam Pro 4000
08B3	Logitech QuickCam Zoom
08B4	Logitech QuickCam Zoom
08B5	Logitech QuickCam Orbit Logitech QuickCam Sphere
08B7	Logitech ViewPort AV100
08BD	Logitech QuickCam Pro 4000
08BE	Logitech QuickCam Zoom
08C1	Logitech QuickCam Fusion
08C2	Logitech QuickCam Orbit MP Logitech QuickCam Sphere MP
08C3	Logitech QuickCam for Notebooks Pro
08C5	Logitech QuickCam Pro 5000
08C6	QuickCam for Dell Notebooks (Built-in notebook camera)
08C7	Cisco VT Camera II
08C9	Logitech QuickCam Ultra Vision
08CA	Logitech QuickCam Fusion (2006 model)
08CB	Logitech QuickCam for Notebooks Pro (2006 model)

08CC	Logitech QuickCam Orbit MP (2006 model) Logitech QuickCam Sphere MP (2006 model)
08CE	Logitech QuickCam Pro 5000 (2006 model)
0840	Logitech QuickCam Express
PID	Product name
0870	Logitech QuickCam Express Logitech QuickCam for Notebooks Logitech WebCam
0850	Logitech QuickCam Web
08F0	Logitech QuickCam Messenger
08F1	Logitech QuickCam Express
08F5	Logitech QuickCam Communicate
08F6	Logitech QuickCam Communicate
09C0	QuickCam for Dell Notebooks (Built-in notebook camera)
09C1	Logitech QuickCam Deluxe for Notebooks
0990	Logitech QuickCam Pro 9000 /PN 960-000048 US /PN 960-000050 CENTRAL /PN 960-000051 MEDITER /PN 960-000052 NORDIC /PN 960-000053 NSEA /PN 960-000054 EER /PN 960-000056 JP /PN 960-000060 AP /PN 960-000061 TW /PN 960-000062 CN /PN 960-000048 US /PN 960-000049 NAMR /PN 960-000139 NAMR /PN 960-000140 MX
0991	Logitech QuickCam Pro for Notebooks) /PN 960-000045 US /PN 960-000046 CAN /PN 960-000047 EMEA /PN 960-000055 JP /PN 960-000056 JP /PN 960-000057 AP /PN 960-000058 TW /PN 960-000059 CN /PN 960-000146 EER
0992	Logitech QuickCam Communicate Deluxe /PN 961465-0403 US /PN 960-000138 NAMR /PN 960-000094 JP /PN 961465-0215 NAMR

	/PN 961465-0310 CENTRAL /PN 961465-0412 MEDITER /PN 961465-0509 NORDIC /PN 961465-0510 NSEA /PN 961465-0924 EER /PN 961465-0116 JP
PID	Product name
0994	Logitech QuickCam Orbit AF / Logitech QuickCam Sphere AF /PN 960-000111 US /PN 960-000112 NAMR /PN 960-000113 CENTRAL /PN 960-000114 MEDITER /PN 960-000115 NORDIC /PN 960-000116 NSEA /PN 960-000117 EER /PN 960-000119 MX
09A1	Logitech QuickCam Communicate MP/S5500 /PN 960-000240 US /PN 960-000196 AMR /PN 960-000241 NAMR /PN 960-000242 CENTRAL /PN 960-000243 MEDITER /PN 960-000244 NORDIC /PN 960-000245 NSEA /PN 960-000246 EER /PN 960-000256 AP /PN 960-000257 CN /PN 960-000258 TW /PN 960-000268 JP
09A2	Logitech QuickCam Communicate Deluxe/S7500 /PN 960-000247 US /PN 960-000248 NAMR /PN 960-000249 CENTRAL /PN 960-000250 MEDITER /PN 960-000251 NORDIC /PN 960-000252 NESA /PN 960-000253 EER /PN 960-000269 JP /PN 960-000270 JP /PN 960-000271 AP /PN 960-000272 CN /PN 960-000273 TW

PID	Product name
09A4	Logitech QuickCam E 3500 /PN 960-000190 US /PN 960-000213 US /PN 960-000214 MX /PN 960-000220 CENTRAL /PN 960-000221 MEDITER /PN 960-000222 NSEA /PN 960-000223 NORDIC /PN 960-000224 EER /PN 960-000233 CENTRAL /PN 960-000234 MEDITER /PN 960-000235 NSEA /PN 960-000236 NORDIC /PN 960-000237 EER /PN 960-000259 AP /PN 960-000260 CN /PN 960-000261 TW /PN 960-000265 JP /PN 960-000266 JP /PN 960-000299 SING
09A6	Logitech QuickCam Vision Pro /PN 960-000254 AMR /PN 960-000301 EMEA
09C1	Logitech QuickCam Deluxe for Notebooks /PN 960-000043 US /PN 960-000044 EMEA /PN 960-000086 EMEA /PN 960-000095 AMR /PN 960-000079 JP /PN 960-000080 JP /PN 960-000012 NAMR /PN 960-000013 MX /PN 960-000069 AP /PN 960-000070 CN /PN 960-000071 TW

USB Printer Support List				
Printer Brands				
HP	Epson	Canon	Lexmark	Samsung
Deskjet D2360	2600N (MONO)	MP145	C500n	CLP300
Deskjet D2460	C1100	MP180	C532dn	ML2010
Deskjet D4160	C2600N (COLOR)	MP450	C532n	ML2571N
Deskjet D4260	C3800DN	MP510	C534dn	ML2581ND
Deskjet F2180	C3800N	MP520	C782n	
Deskjet F380	C4200DN	MP530	C920n	
Deskjet F4185	C9100	MX308	C935dn	
LaserJet 1020	CX11F	MX318	E120n	

HP	Epson	Canon	Lexmark	Samsung
LaserJet 1022 Series	EPL-6200	MX700	E250d	
LaserJet 1600	EPL-6200L	PIXMA iP1880	E250dn	
LaserJet 2600 Series	EPL-N2500	PIXMA iP3300	E450dn	
LaserJet 2605 Series	EPL-N3000	PIXMA iP3500	T642n	
LaserJet 2700 Series	PHOTO 1390	PIXMA iP4300	T644n	
LaserJet 2800 Series	PHOTO R1800	PIXMA iP4500	W840n	
LaserJet 3000 Series	PHOTO R1900		Z1320	
LaserJet 4250 Series	PHOTO R2400		Z1420	
LaserJet 4350 Series	PHOTO R290		Z645	
LaserJet P1006	PHOTO R800		Z845	
LaserJet P1505 Series	PICTUREMATE 100			
LaserJet P2014 Series	PICTUREMATE PM210			
LaserJet P2015 Series	PICTUREMATE PM250			
LaserJet P3005 Series	PICTUREMATE PM270			
Photosmart 8230	STYLUS C110			
Photosmart 8330	STYLUS C90			
Photosmart 8450				
Photosmart 8750				
Photosmart D5160				
Photosmart D5360				
Photosmart D7160				
Photosmart D7260				
Photosmart D7360				
Photosmart D7460				