



Limited Warranty – Laminator

Laminator OL 289/01/2012

Please enclose your proof of purchase and this filled in warranty card with the machine!

3 year warranty
from the purchase date!

Sender: (please print legibly using block letters and store in a safe place)

Surname, name:

Street, number:

City: State: Zip Code:

Phone number with city code:

Description of fault:

Purchase date:

Date, Signature:

Note:

When you make a warranty claim, please include the warranty card and the proof of purchase with the defective device. If possible, add a detailed description of the fault. Warranty cards sent to us in retrospect will not be acknowledged.

Customer service:

monolith Service Hotline: 1 877-386-8264
Service fax number: 1 877-386-8264
E-mail: usa@monolith-support.com
Service address: monolith USA Inc., 3210 N Canyon Road, Suite 307, Provo, UT 84604
web address: www.monolith-support.com

Helpline No.: 1 877-386-8264 • Model Number: OL 289
monolith GmbH • Schwarze Horn 1 • D-45127 Essen • www.monolith-support.com

Laminator OL 289/01/2012



AFTER SALES SUPPORT

HELPLINE NO: 1 877-386-8264
WEB SUPPORT:
www.monolith-support.com

MODEL NUMBER: OL 289

Manual and Warranty

Contents

1. Description of Machine Components	3
2. Specifications	3
3. Outline of Applications	4
4. ABS Anti-Blocking System	4
5. General Instructions about the Laminator	4
6. Getting Ready to Laminate	5
7. General Tips on Laminating	5
8. How to Laminate	6
9. Cold Laminating	6
10. Storage	6
11. Disposal	6
12. Safety Advice and Maintenance	7
13. Guarantee Terms	8
14. Warranty Card	9

Items Supplied/Contents of Package


Laminator, pouch holder and starter set consisting of:
10 x Laminating pouches 9" x 11.5" 3 mil for letter size format (8.5" x 11")
10 x Laminating pouches 5.3" x 7.3" 3 mil for 5" x 7" format
10 x Laminating pouches 2.13" x 3.39" 3 mil for 2" x 3.3" format

About the Safety Notes

All safety notes and other important information have a grey background. The machine is equipped with safety features. However, always carefully read the safety instructions and only use the machine in the manner described in this manual to avoid accidents which could cause damage or injury. Keep the manual safe so that it is available to read in the future. If the machine is passed on, please pass on the manual too.

Helpline No.: 1 877-386-8264 • Model Number: OL 289
monolith GmbH • Schwarze Horn 1 • D-45127 Essen • www.monolith-support.com

1. Description of Machine Components

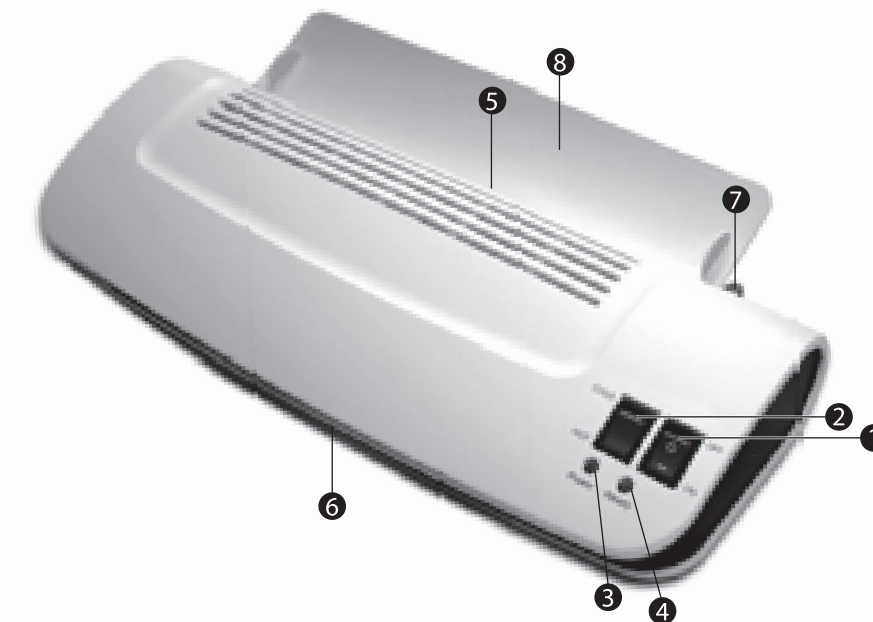

- | | |
|----------------------------|------------------------------|
| 1 ON/OFF flip switch | 5 Film infeed slot |
| 2 HOT/COLD flip switch | 6 Film output |
| 3 Power light, red | 7 ABS (anti-blockage system) |
| 4 Standby indicator, green | 8 Pouch holder |


2. Specifications OL 289

Preheating time:	3 mil / 5 mil approx. 3-4 minutes
Operating speed:	76.2"/min.
Laminating temperature:	Approximately 239°F
Maximum film width:	Letter size
Film thickness:	3 - 5 mil (8 mil cold lamination film)
Weight:	1.9 lbs
Dimensions (w x d x h):	12.99" x 7.48" x 2.24"
Input voltage:	120 V / 60 Hz
Power consumption in the first minute/ during operation:	600 watts / 60 watts



Helpline No.: 1 877-386-8264 • Model Number: OL 289
monolith GmbH • Schwarze Horn 1 • D-45127 Essen • www.monolith-support.com

3. Outline of Applications

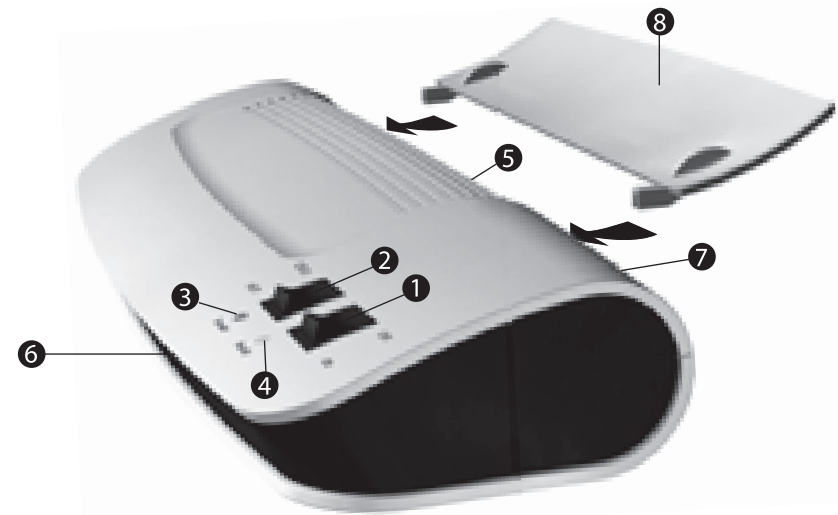

4. ABS Anti-Blocking System

Your laminator is equipped with an Anti-Blocking System. If the pouch was not inserted straight or it becomes jammed in the machine, push the ABS switch ⑦ toward the left. You can then take the laminating pouch and its contents out of the machine and reinsert the document in a new pouch into the film feed slot ⑤.

5. General Instructions about the Laminator

Please read the manual before using the machine.

Please note: When using the machine, you may find it gives off a slight odor. Please ensure there is sufficient ventilation in the room.

A laminator is not a toy. Keep it locked away from children!

6. Getting Ready to Laminate

- 6.1. Sit the machine so that there is enough space to insert the laminating pouches (in other words, not right in front of a wall or other objects).
- 6.2. Remove the separately packaged pouch holder ⑧ from the box and insert it into the two designated openings on the back side of the device.
- 6.3. Insert the plug into an earthed power socket (120 V / 60 Hz = domestic power supply).
- 6.4. Switch the machine on using the ON/OFF switch ①. The red power light ③ will come on.
- 6.5. Select either hot or cold lamination by flipping the HOT/COLD switch ② to the desired position. **Note:** Your laminator supports lamination of 3 mil and 5 mil film without mode-switching.
- 6.6. The green standby indicator ④ light appears as soon as the machine has reached the right temperature. **The preheating time can vary depending on the ambient temperature and air humidity.**

7. General Tips on Laminating

After laminating

1. Set the on/off toggle switch ① to "off".
2. Pull the main power supply plug from its socket.
3. Leave the machine to cool.

Cleaning the rollers

1. Switch on the machine.
2. Fold a sheet of Letter Size paper and insert this, folded edge first, into the pouch feed tray ⑤. Keep repeating this process until no more glue deposits cling to the paper.

Cleaning the machine

1. Always remove the main power supply plug from its socket before cleaning the machine.
2. Let the machine cool down.
3. Always clean the machine with a soft cloth. Use neutral cleansing agents, never abrasives.

8. How to Laminate

- 8.1. Please note! Only take one pouch per lamination, as pouches stick tightly together. Place the document that you wish to laminate between the two sides of the laminating pouch. Ensure that it lies flush with the enclosed edge.
- 8.2. Insert the laminating pouch closed-edge-first into the slot ⑤ on the back of the machine. The rollers will automatically pull the pouch in and transport it to the output slot ⑥ on the front of the machine. Don't use force to pull out the samples. In the event of jamming, see the ABS section.
- 8.3. Let the pouch cool for a bit, and then it's ready.
- 8.4. If the laminating pouch has not adhered properly to the paper, repeat the process.

9. Cold Laminating

Please note that only pouches intended specifically for cold lamination may be used. Originals with a treated surface, such as fax thermopaper or Polaroid pictures, and papers with surfaces that may be altered through heat should only be laminated using cold lamination. In these cases, set the temperature switch ② to position "COLD". Slide the foils, with the item to be laminated between them, into the feed slot ⑤.

Please note: After hot lamination, wait 20-30 minutes after flipping the temperature switch ② to <COLD> to allow the unit to cool down before you start cold laminating.

10. Storage

The best way to store the machine when not in use is in the original packaging. Keep the machine in a dry location away from sources of heat.

11. Disposal

The product packaging is recyclable. Dispose of this with due regard for the environment. When no longer serviceable, the machine should not be thrown away with the household rubbish, but disposed of in line with legal requirements. This is in the interests of recycling and protecting the environment. Ask your local authority waste department or your local disposal company about suitable disposal options. Before disposal ensure that the machine is rendered unusable. Disconnect the machine from the power supply and remove the main power supply cable.

12. Safety Advice and Maintenance

The device should only be connected to a properly installed 120 V / 60 Hz power point and has a protective conductor. This must be close to the equipment and easily accessible, so that it can be detached from the main power supply if need be. Any adapter or extension cable must also have a protective conductor and be easily accessible so that it can be detached from the main power supply if necessary.

Never insert any other objects other than laminating pouches that are intended for this device, particularly metallic objects, into the pouch insertion slots.

Children should only use the device if supervised by adults.

Protect the device from moisture. The location of use must also be dry. Damp documents should not be laminated. In the case of emergency, always pull the plug out from the main power supply.

The device is only designed to be used in the private sector.

The device generates heat when laminating. Strong sunshine or indoor heating can exacerbate this situation and can cause the device to become faulty. In such cases, you should also pull the plug out from the main power supply immediately.

The device has ventilation slots. These should not be covered up with other objects such as magazines, cloths, etc.

After use, switch the device off, and then always pull the plug out from the main power supply.

The device automatically switches off if it overheats.

Only laminate at room temperatures (approx. 50 - 77 °F).

The device should never be connected if the cable is damaged.

Plastic bags can present a danger. To avoid any danger of suffocation, keep the bag away from babies and children.

Please clean this machine only with a damp cloth.

Meaning of the warning symbols



Caution!



Read the instructions!



Do not dispose in the household rubbish!

Limited Warranty – Laminator

!IMPORTANT WARRANTY DOCUMENT – KEEP SAFE!

Laminator OL 289/01/2012

Guarantee Terms

Dear customer,

Congratulations! You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that:

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were not carried out by any other than the authorized workshop

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This warranty does not affect your statutory rights.

This purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The warranty can only be extended for the duration of any repair required.

During the warranty period if the product becomes defective, in the first instance, please call our service hotline. We will, at our discretion, either repair or exchange the device in accordance with warranty legislation.

If you are required to return the item please enclose the following:

1. Receipt (proof of purchase)
2. This warranty certificate with the fault report form overleaf complete with your name, contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs period to the address stated below. Quotes as well as repairs after the warranty period are to be paid for in all cases.

Ensure that the product is sent well packed as no responsibility can be accepted for items lost or damaged in transit.

This warranty does not affect your statutory rights.

Some states do not allow the exclusion of limitations of implied warranties or consequential damages, therefore, the above limitations may not apply to you.

This warranty grants you specific legal rights, and you may also have other rights that vary from state to state.

Any expressed or implied warranties, including but not limited to merchantability and fitness for a particular purpose are limited to the above warranty period. Monolith shall not be liable for any incidental or consequential cost, expenses or damages resulting from any failure defect or malfunction of this product.

Our monolith products undergo strict quality controls. If this equipment does not function perfectly, please contact our

Service Hotline: 1 877-386-8264

Our service hours are: Mon. - Fri. 08:30 a.m. - 05:00 p.m.

We hope you have lots of fun with your new laminator!